

---





**GENERAL®**

**DCS700**

*USER'S MANUAL*




 **VIDEOFLEX™ DATA LOGGING  
VIDEO BORESCOPE**

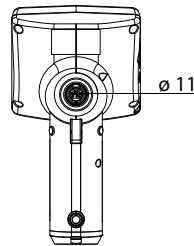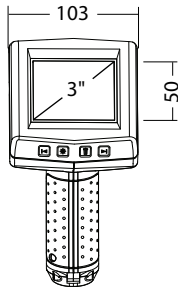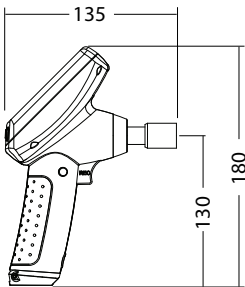


## Function / Application


This inspection camera features a micro-camera which sends color video images to the LCD so that areas which are difficult to access (cavities, shafts, masonry or inside cars, for example) can be checked. The data recorded, which can include both still images and video recordings, can be saved when captured for evaluation at a later point in time.

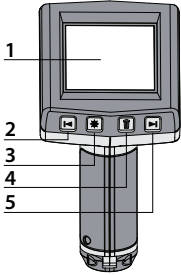

- 1 LCD
- 2 Zoom out/ Navigate/ Rewind
- 3 LED lighting
- 4 DEL: Delete
- 5 Zoom in/ Navigate/ Forward

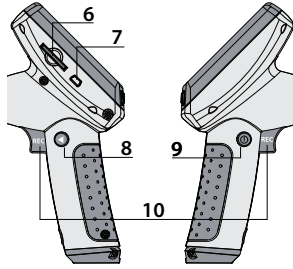


- 6 Slot for SD card
- 7 USB 2.0 port
- 8 Toggle mode
- 9 ON/OFF
- 10 REC: Trigger/ Record/ Confirm

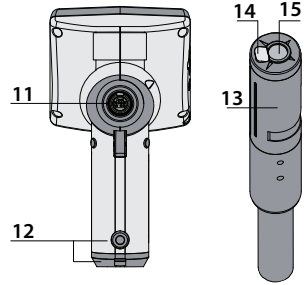


- 11 Connection for flex cable
  - 12 Battery compartment
  - 13 Camera head
  - 14 LED
  - 15 Lens
- NOTE: The camera focus is set to 2" (50mm). Objects outside this range may appear blurred.

### Record mode

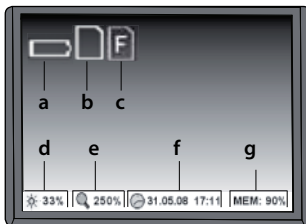


- a Battery status
- b SD card active
- c Insert SD card
- d Intensity of LED lighting (0%, 33%, 66%, 100%)
- e Zoom level (100%-300%)
- f Date/Time
- g Available memory space on SD card

### Playback mode

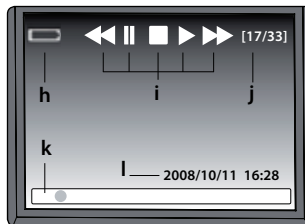



- h Battery status
- i Pause/Stop/Playback Forward/Rewind
- j Recording number/Number of recordings
- k Timeline
- l Recording date/time

### Settings mode

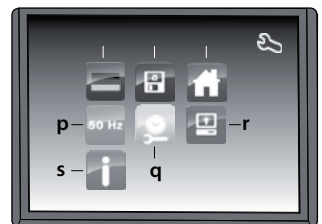


- m Menu language
- n Format SD card
- o Restore factory settings
- p Changeover 50/60 Hz
- q Date/Time
- r LCD brightness
- s Software version

## First use (1-6)

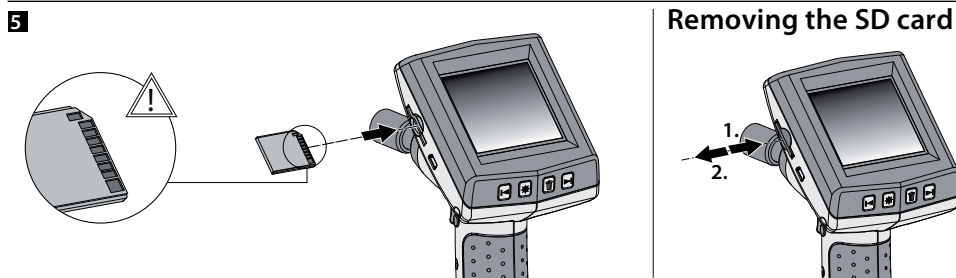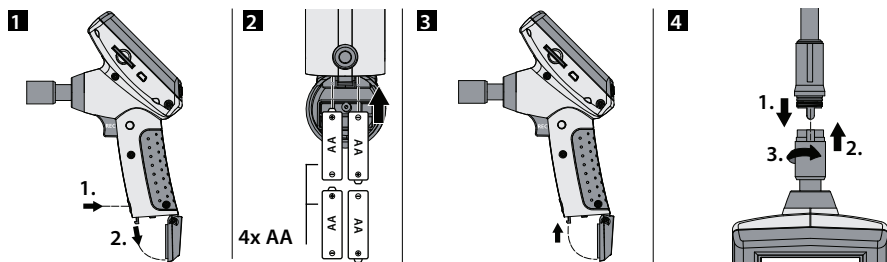


## 6 Setting the menu language

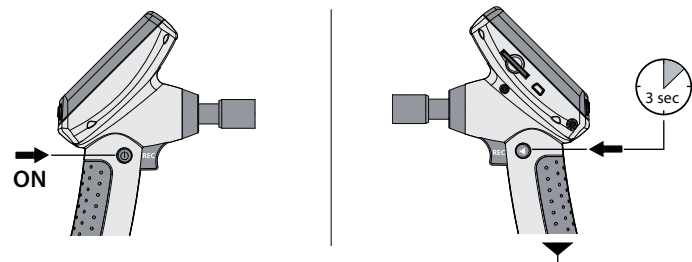


### a. Changing the language




To return to recording mode, press and hold down the button (8)  for 3 seconds.


### Record mode

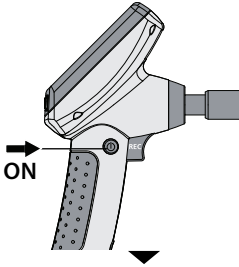

### Playback mode

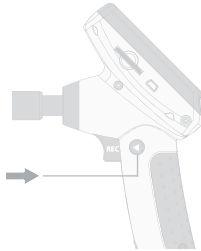


### Settings mode

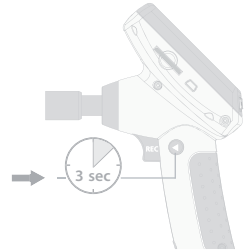


## Still images/Video recordings

Line up the camera head on the flex cable and move it to the required position. If lighting conditions are poor, switch on the LED lighting. Zoom in on distant or small objects. Press the REC button briefly (< 2 seconds) to take a still image and save it to the SD card. Press and hold down the REC button (> 2 seconds) to start a video recording. To stop recording, release the REC button.


### 1 LED lighting

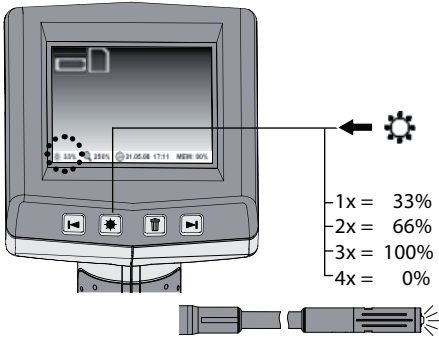


### 2 Zoom

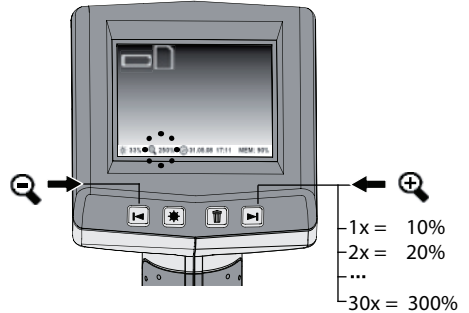


### 3.a Still image

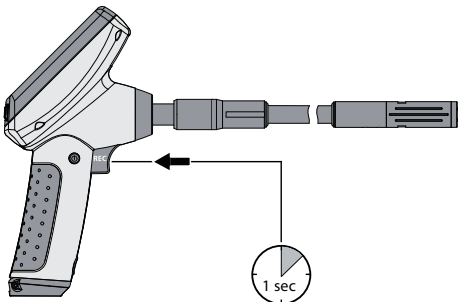


### 3.b Video

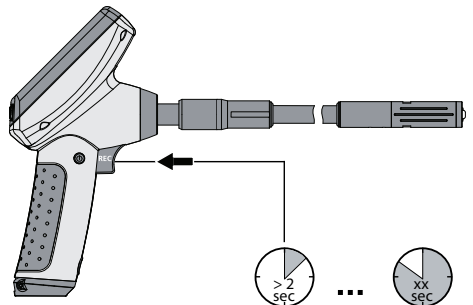


## Record mode

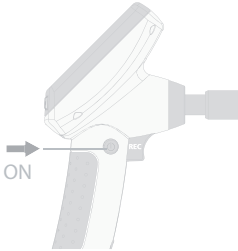

## Playback mode

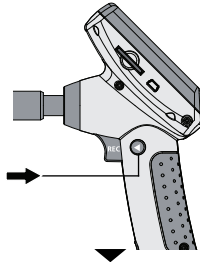


## Settings mode

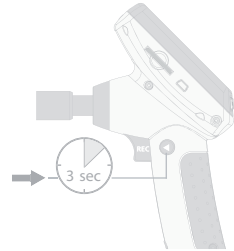


## Playback of still images/video recordings

The last image or video recorded is shown on the display. Use the arrow keys to browse forward and back through the recordings. A video recording is identified by a red "Pause" symbol. During playback, the REC button is used for the "Play/Pause" functions and the arrow keys for "Forward/Rewind". To delete a recording, press the "DEL" button.


### 1 Navigation

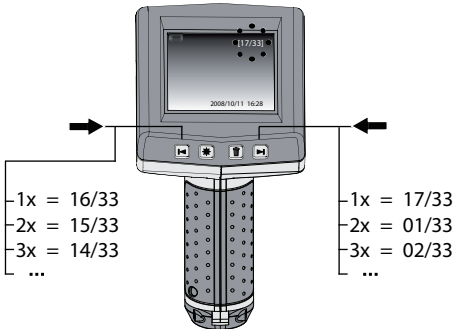


### 2 Delete recording

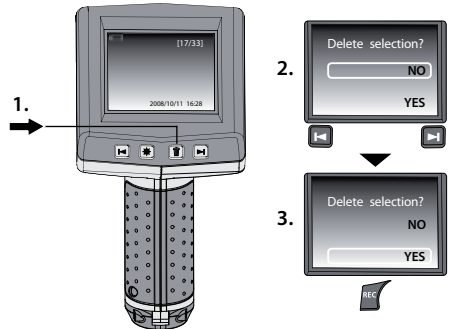


### 4.a Playback

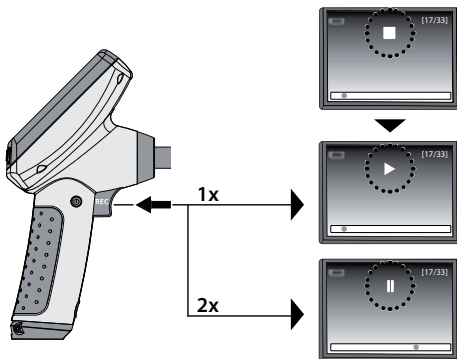


### 4.b Forward/Rewind

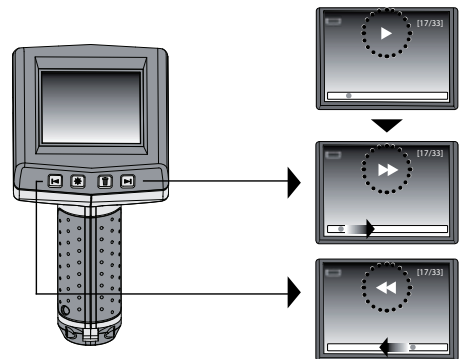


Record mode

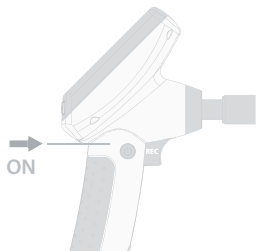

Playback mode

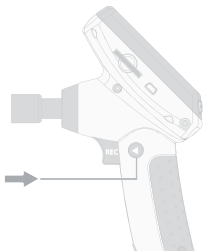

Settings mode

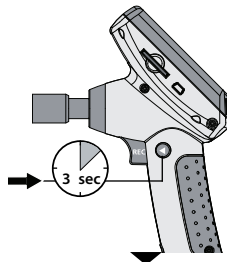

a. Changing the language




b. Format SD card



c. Restore factory settings




#### d. Change frequency

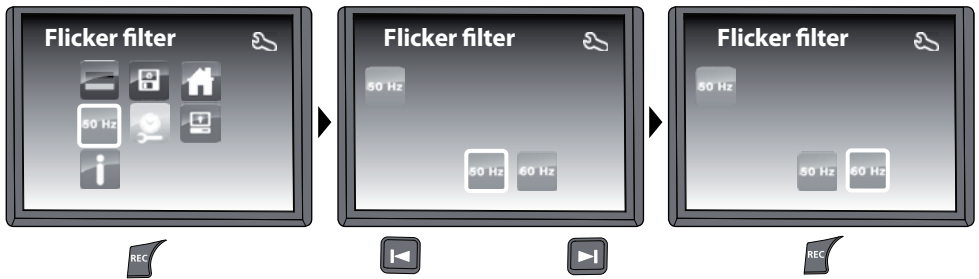


#### e. Set date/time (press the ◀ button to return to the menu)



#### f. Display brightness

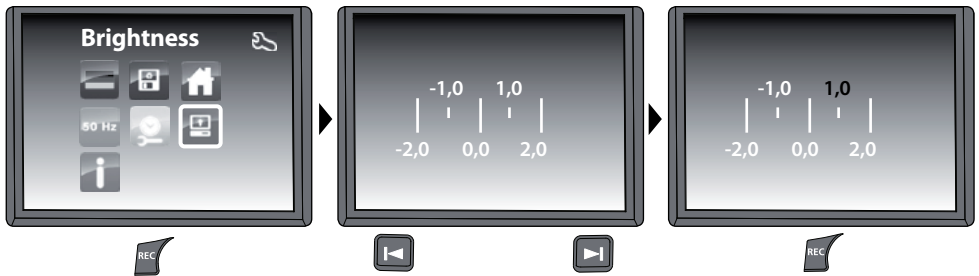


#### g. Software Version

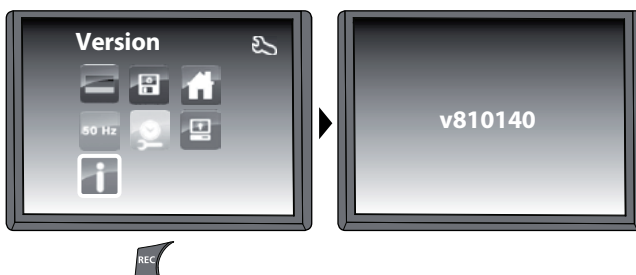


## USB data transfer

Data saved on the SD card can be transferred to PC either with a suitable card reader or directly via the USB port. Please refer to the manual supplied with your card reader for information about connecting your card adapter or card reader to a PC.

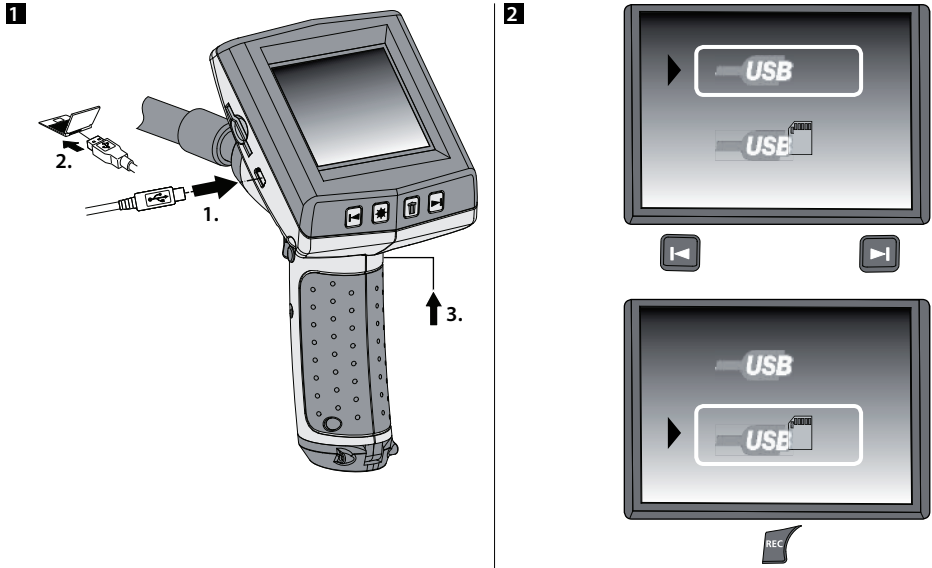


## Camera head/Focus

The VideoFlex is fitted with a camera head as standard. The head is set to a focus of 2" (50mm).

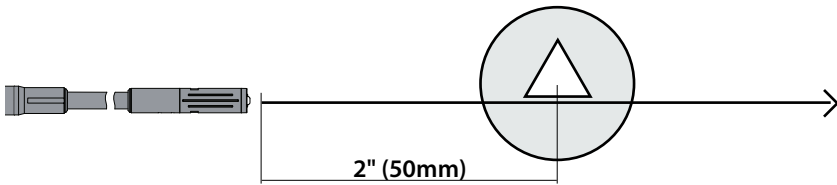

Objects far outside this range may appear blurred.

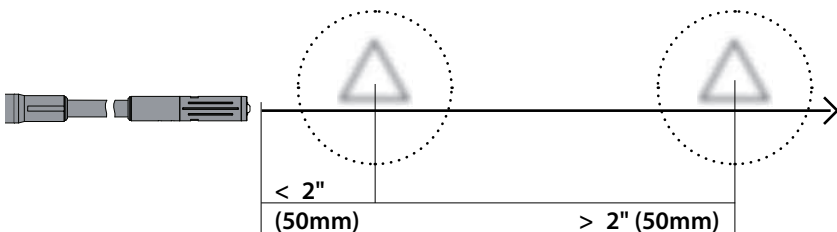

---

## Instructions for use

- It is absolutely vital to ensure that the VideoFlex does not come into contact with chemicals, current, moving or hot objects. This can damage the device and put its user at risk of serious injury.
- The LCD unit must not be immersed in water.
- The camera head is not acid-resistant or fireproof.
- The VideoFlex must not be used for medical examinations/examining people.
- The device should always be stored in the case in which it was supplied.
- Strong vibrations and extreme deviations in temperature should be avoided.

---

TECHNICAL DATA		Technical revisions reserved. 11/08
Camera Head	< ø .7" (17mm), water-resistant, IP 67	
Camera Focus	2" (50mm)	
Screen Type	3.0" LCD	
Display Resolution	320 x 240 pixels	
Image/Video Resolution	1280 x 960 pixels/640 x 480 pixels	
Image Format/Video Format	JPEG/AVI	
Screen Lighting	5 brightness levels	
LED	3 brightness levels	
Zoom	3x digital zoom in 10% increments	
Memory	1 GB SD card (supports up to max. 2 GB)	
Length of Flex Cable	3.3ft (1m) extensions available as optional extras	
Port	USB 2.0	
Auto Shutdown	5 min	
Power Source	4 "AA" 1.5 V batteries	
Operating Temperature	32° to 113°F (0° to 45°C)	
Storage Temperature	14° to 158°F (-10° to 70°C)	
Weight		
including batteries and flex cable	26.1oz (740g)	

---

## Warranty

The warranty period is 2 years from the date of purchase. The warranty covers all material or manufacturing defects occurring during this time. The following are excluded from warranty: Damage due to improper use (e.g. operation with wrong type of current/voltage, connection to unsuitable power source, fall onto hard surface, etc.) or improper storage, normal wear and tear, and defects which only insignificantly impair the value or suitability for use. Any tampering by unauthorised persons will render this warranty void. In the event that you need to claim warranty, please contact your point of purchase.



**Specialty Tools & Instruments™**

---

**GENERAL TOOLS & INSTRUMENTS™**

80 White Street New York, NY 10013-3567

PHONE (212) 431-6100 FAX (212) 431-6499 TOLL FREE (800) 697-8665

**e-mail: [sales@generaltools.com](mailto:sales@generaltools.com) [www.generaltools.com](http://www.generaltools.com)**

DCS700 User's Manual

Specifications subject to change without notice

©2009 GENERAL TOOLS & INSTRUMENTS™

*NOTICE - WE ARE NOT RESPONSIBLE FOR TYPOGRAPHICAL ERRORS.*

MAN#DCS700 03/09